

FITTING GUIDE

BEADED FRAME

Beaded Frame Access Panels require an unfinished wall or ceiling for installation. By plastering the panel in to the wall or ceiling an elegant, clean look is achieved with the aperture.



1: Cut the plasterboard to the aperture



2: Offer the panel to the hole



3: Use the pre-punched side and flange fixing holes



4: Tape the ceiling



5: Skim over the beaded frame



6: Finished first coat



7: Ceiling second coat and polish



8: Clean out the plaster from between the door and the frame before emulsifying over ceiling and door face.

PICTURE FRAME

Picture Frame Access Panels are the perfect access solution in situations where your walls and/or ceilings have already been finished. They create a neat and tidy access point with very little fitting effort.




1: Prepare the hole in the wall or ceiling



2: Offer the panel to the hole



3: Take care to ensure the panel fits into the hole

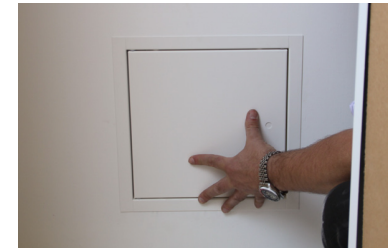

4: Ensure the picture frame sits flush with the wall or ceiling



5: Hold the panel in place and use the pre-punched fixing holes on the side of the frame to secure



6: Complete



THE ACCESS PANEL
COMPANY LTD

For more information please call us on 01724 853 090 or visit our website accesspanels.co.uk

